


Body Mount Bolt Kit Instructions
1958 Chevrolet (all models EXCEPT convertible)

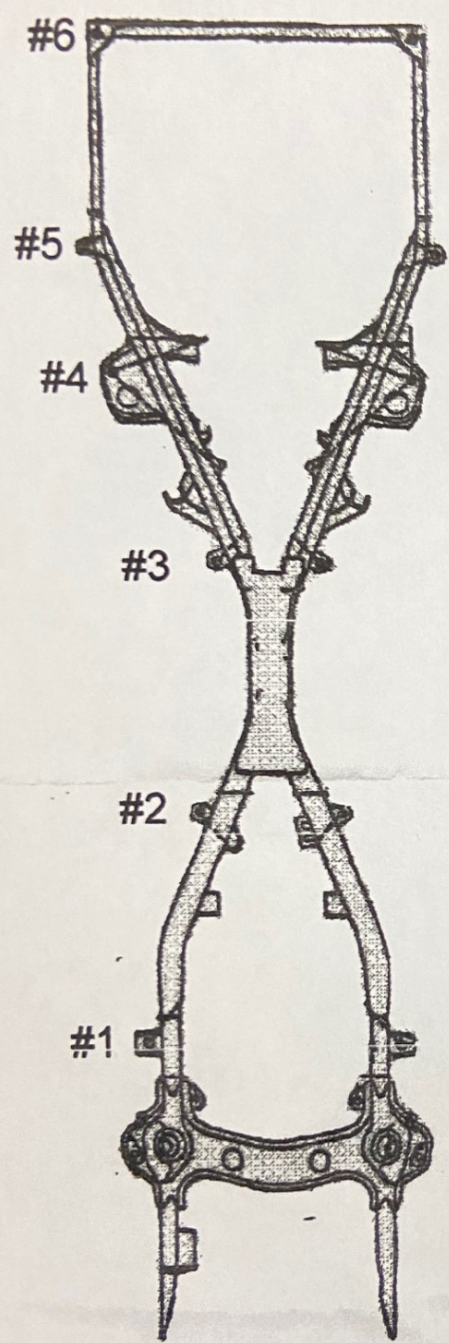

Front View From Top

↑ Bolt goes in from bottom

↓ Bolt goes in from top

Mount #1 ↓ 2 1/2" bolt, 1 3/4" washer
(2) washers and nut

Mount #2 ↑ 2 1/2" bolt, 1 3/4" washer

Mount #3 ↑ 2 1/2" bolt, 1 3/4" washer

Mount #4 ↑ 2 1/2" bolt, 1 3/4" washer

Mount #5 ↑ 2 3/4" bolt, 1 3/4" washer

Mount #6 ↑ 2 1/2" bolt, 1 3/4" washer