


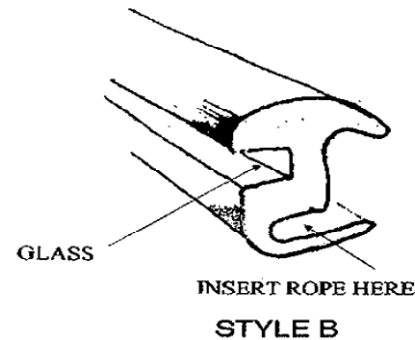

Installation

Clean glass thoroughly.

Apply gasket onto glass starting at the corners. Make sure corners and trim are in the right place.
For gaskets without corners, make sure you place the vulcanized seam in the bottom middle of the glass.

Insert a 1/4" diameter rope in the section at the bottom of the gasket. Starting at the bottom and overlapping 6 to 8 inches.

Spray the gasket with a soapy water solution to help ease installation.

Lay the glass and gasket into the vehicle opening making sure it is aligned squarely.

Start pulling the rope from the inside of the vehicle working slowly across the bottom* and up the sides and finally across the top*. Gently pat the glass into place with a flat hand from the outside.

* For Chevy trucks 67-72 you will want to start at the top center and finish at the bottom with the rope.

Note: Windshield installations after 1978 should be sealed with a urethane adhesive.
Follow the urethane adhesives manufacturer's installation procedures.